


INSTALL DIRECTLY ON CONCRETE

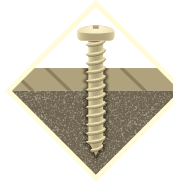

Genovations® decking can be installed directly to concrete. It is an “all PVC” product and does not require a vapor barrier. When installing directly to concrete, follow the same procedures as you would to secure it to a wood frame (see “Installation & Maintenance Guide #253574), with the following exceptions:

1

Genovations® deck boards will directly follow, not hide, any and all surface irregularities. Before installation, be sure to address all irregularities, including heaves or uneven surfaces in the concrete. If you use wood framing to correct uneven surfaces, the wood framing must be secure; no floating frames or sleepers.

2

To ensure proper drainage you will need a minimum of a $\frac{1}{8}$ " per foot fall away from any house or structure.

3

Use TAPCON® hex head screws when fastening Genovations Starter Strip® and deck boards to concrete.

Size required: $\frac{3}{16}$ " x 1 $\frac{1}{4}$ " (See Right)

Follow TAPCON® screw instructions for pre-drilling and installing concrete anchors.

4

Secure and support the deck boards every 16".

5

Use C-Channel or Trim Strips to finish the outside over hanging deck board edges.

